
Load Volume Scanner – Automatic software update instructions

Loadscan can supply Load Volume Scanner (LVS) software updates or configuration changes as an automatic update file.

The file will be detected by the LVS and processed automatically.



The current software version is displayed on the LVS operator console System screen.

How to perform an automatic update

1. Download the update file from the link supplied by Loadscan and save to a USB flash drive.



Save the file directly to the root level of the flash drive (not in a subfolder).
Do not try to decompress (extract) the archive file before saving.

2. Power down the LVS operator console.
3. Insert the USB flash drive into the console USB port.
4. Re-power the console.

The update procedure should start automatically after the console computer boots up.



After the update completes a “System has been updated” message prompt appears.

5. Press the "Continue" button to open the LVS main screen.

Error handling

If the update fails:

Possible fault	Resolution
Faulty or incompatible flash drive	Try a different model
Corrupt update file	Copy from source again
Incorrect update file	Check that the correct file was supplied